INSTALLING DURAFENCE.


How to set out, dig and set the posts, then fit the panels. Durafence posts are concreted in, like most fences. Read it through before you start.

01 BEFORE YOU START

- Check your order as soon as it arrives, and within 48 hours. That way any transport damage can be claimed with the transport company.
- Check for underground services such as gas, power and water before you dig. beforeUdig has a free online map, but it is only a guide. An underground detection service is the safest option.
- Check your council's requirements, including pool fencing rules if the fence is part of a pool barrier.

02 SET OUT THE POSTS

- Find the boundary line accurately and run a string line along it, 200 to 300 mm above the ground. The string marks where the front face of the posts will sit.
- Mark the post centres with marking paint. For a standard 2400 mm panel, posts are 2440 mm apart, centre to centre.
- Gate posts go 40 mm wider than the gate, to leave room for the hinges and latch. A 900 mm gate needs a 940 mm opening.
- For double gates, set the gate posts 60 mm wider than the two gates combined.

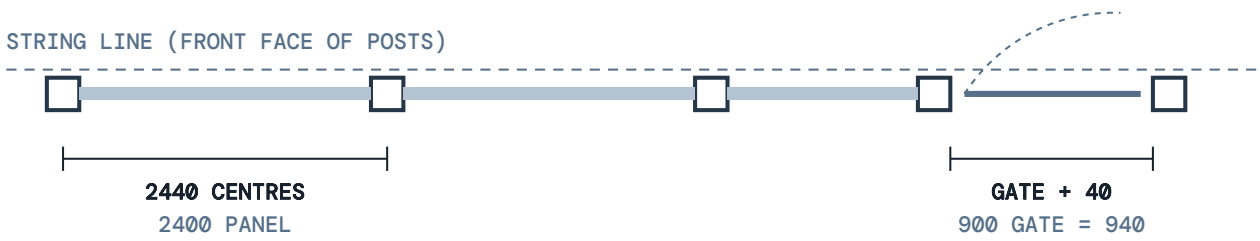

PLAN VIEW, MM. DOUBLE GATES: BOTH GATES + 60.

NEED A HAND?
Call us before you start. We're happy to help.


0800 235 2473 · sales@durafence.co.nz
durafence.co.nz/resources/installation

03 DIG THE HOLES

- Dig the post holes, or use a 300 mm post hole borer.
- Dig each hole 700 mm deep, or one third of the post length.
- Put a brick or a concrete pad in the bottom of each hole, under the post. It gives the post a footing and stops it sinking.

04 SET THE POSTS

- Concrete the posts in, finishing the concrete 50 mm below ground level.
- You can pour a small amount of concrete inside the post, up to just below ground level.
- In high-wind zones, we recommend aluminium inserts in every second or third post.

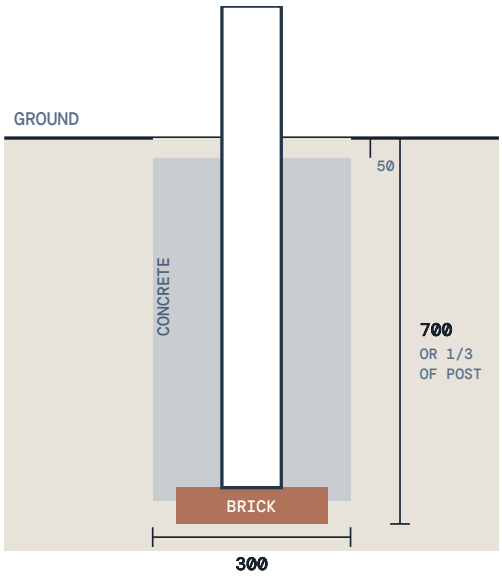

SECTION, MM. CONCRETE FINISHES 50 BELOW GROUND.

NEVER FILL THE WHOLE POST WITH CONCRETE.
A post filled with concrete will split.

05 FIT THE PANELS

- Slide in the bottom rail first. It is the rail with the alloy insert.
- Slot in the boards, with the U-channel at each end of the panel.
- Slide on the top rail.
- PVC expands and contracts a little with temperature. That's normal.

WATCH THE INSTALL VIDEO
youtube.com/watch?v=seQ0pVNaUzk

06 LOOK AFTER IT

- An occasional wash keeps it looking new. It is water-blast safe up to 1600 psi.
- Never paint Durafence. Painting voids the warranty.

NEED A HAND?
We can help with advice, gates and installers.

0800 235 2473 · sales@durafence.co.nz
2 Waitane Place, Onekawa, Napier 4110